
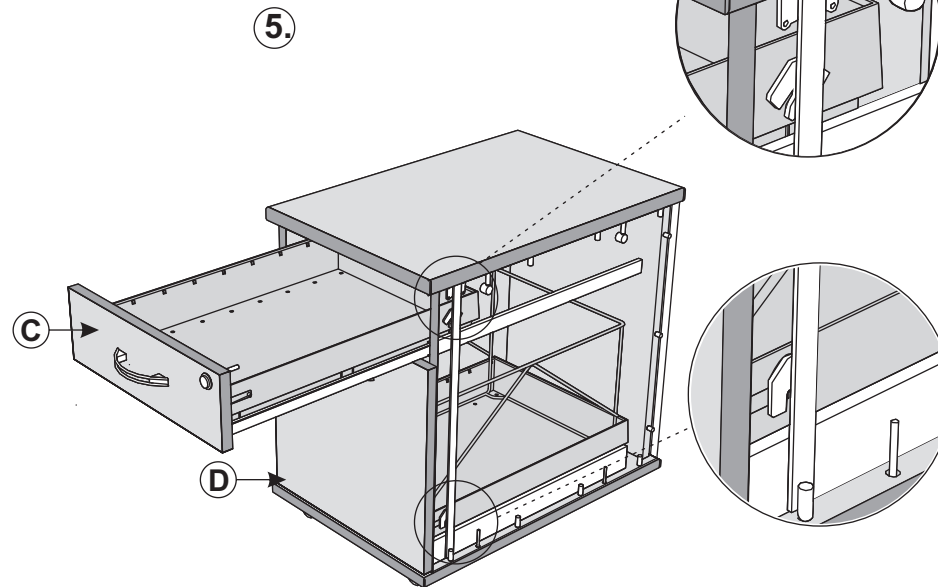
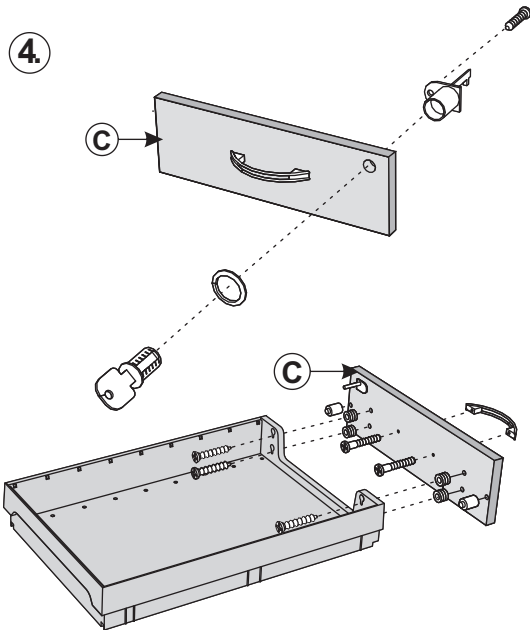
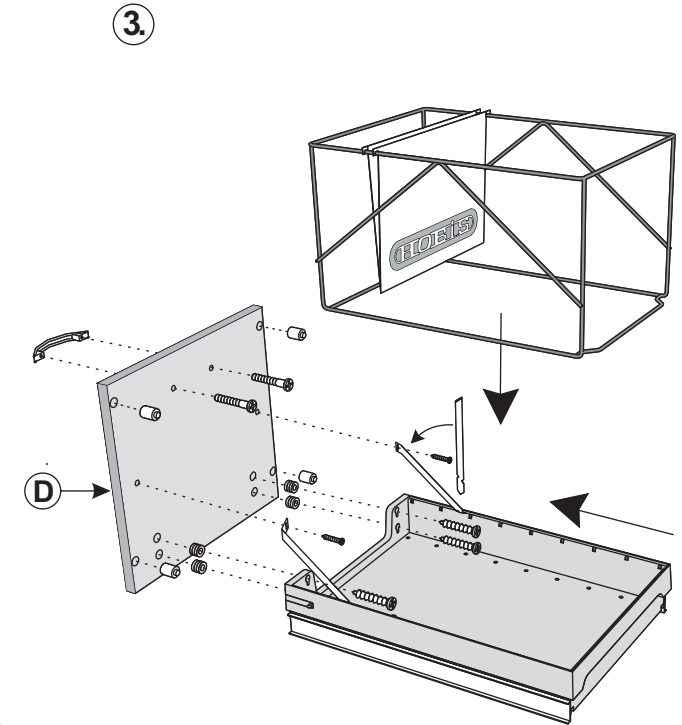
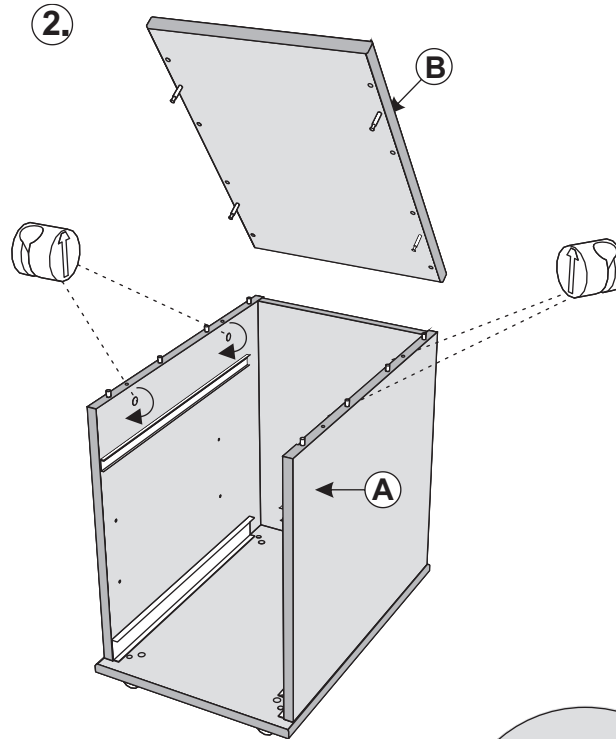


Montážní(y) návod 50 .

Assembly instructions 50.

Montageanleitung 50 .

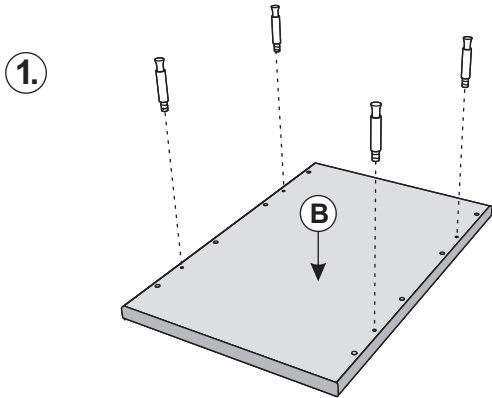

HOBIS/DRIVE	HK 22 ZSC N, DK 22 ZSC N	HK 22, X0N 26 (D), X22, USN 2(USH 2)
	HK 22 ZSC P, DK 22 ZSC P	HK 22, X0P 26 (D), X22, USN 2(USH 2)
	HK 22 ZSC N 80, DK 22 ZSC N 80	HK 22, X0N 28 (D), X22, USN 2(USH 2)
	HK 22 ZSC P 80, DK 22 ZSC N 80	HK 22, X0P 28 (D), X22, USN 2(USH 2)

K 22 ZSC P	H-X 22, H-HK 22, H-X 0 P 26 S, H-USN 2 (H-Uxx 2)
K 22 ZSC P 80	H-X 22, H-HK 22, H-X 0 P 28 S, H-USN 2 (H-Uxx 2)
K 22 ZSC N	H-X 22, H-HK 22, H-X 0 N 26 S, H-USN 2 (H-Uxx 2)
K 22 ZSC N 80	H-X 22, H-HK 22, H-X 0 N 28 S, H-USN 2 (H-Uxx 2)

H-HK 22 HK 22 DK 22	4 ks		H-HK 22 HK 22 DK 22	3 ks	
	4 ks			1 ks	
	1 ks			8 ks	
	6 ks			8 ks	
	1 ks			1+1 ks	
	2 ks			3 ks	

