


Montážní(y) návod 81.

Assembly instructions 81.




Montageanleitung 81.

S 2 80 03 L	H-RH S, H-RC L S, H-ROL M S
S 2 80 03 P	H-RH S, H-RC P S, H-ROL M S
S 3 80 07 L	H-RL S, H-RC 2 L S, H-ROL V S
S 3 80 07 P	H-RL S, H-RC 2 P S, H-ROL V S
SPR 80 40 P	H-E PRC 4 P S, H-E RH 4 P S, H-E RC 4 P S, H-ROL E S, H-R 400 800 30
SPR 80 40 L	H-E PRC 4 L S, H-E RH 4 L S, H-E RC 4 L S, H-ROL E S, H-R 400 800 30
SPR 80 60 P P	H-E PRC 6 P P S, H-E RH 6 P S, H-E RC 6 P S, H-ROL E S, H-R 400 800 30
SPR 80 60 P N	H-E PRC 6 P N S, H-E RH 6 P S, H-E RC 6 P S, H-ROL E S, H-R 400 800 30
SPR 80 60 L P	H-E PRC 6 L P S, H-E RH 6 L S, H-E RC 6 L S, H-ROL E S, H-R 400 800 30
SPR 80 60 L N	H-E PRC 6 L N S, H-E RH 6 L S, H-E RC 6 L S, H-ROL E S, H-R 400 800 30




H-RH S	2 ks	H-ERH 4 L S	4 ks
H-RL S	6 ks	H-ERH 6 P S	6 ks
	6 ks		6 ks
	1 ks		1 ks
	1 ks		2 ks
	2 ks		1 ks
	1 ks		1 ks
H-ROL V S	3 ks		2 ks
H-ROL M S	3 ks	H-ROL E S	3 ks
H-E RC 4 L/P S	4 ks		3 ks
H-E RC 6 L/P S	4 ks	H-RC 2 L/P S	8 ks
H-RC L/P S	4 ks		2 ks
	2 ks		4 ks
	4 ks		

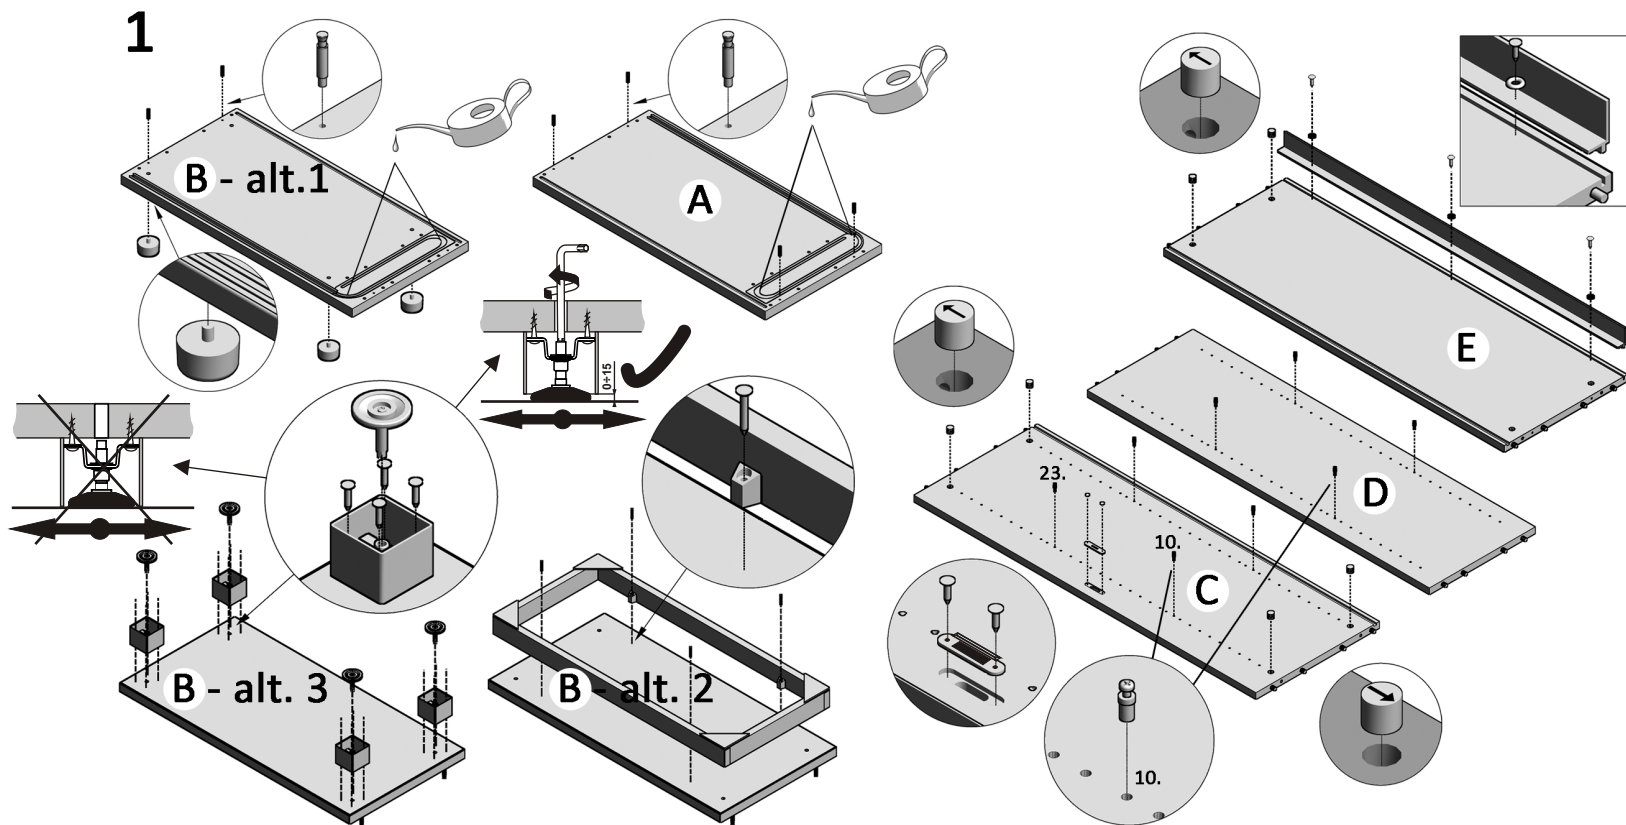


2

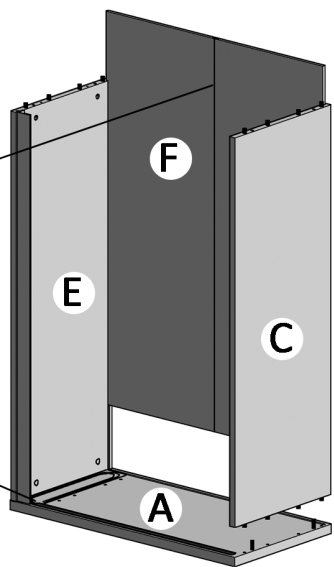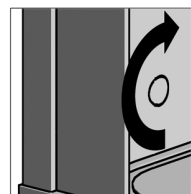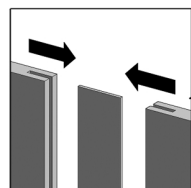

3

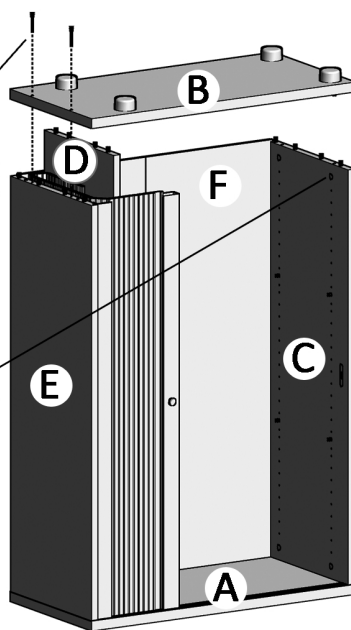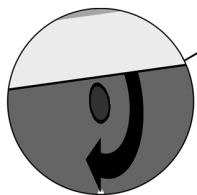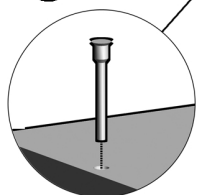

4

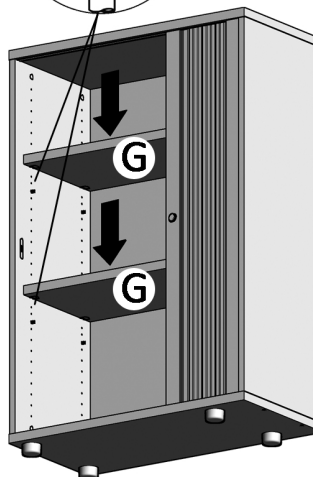

5

