


Montážní(y) návod 87.

Assembly instructions 87.

Montageanleitung 87.

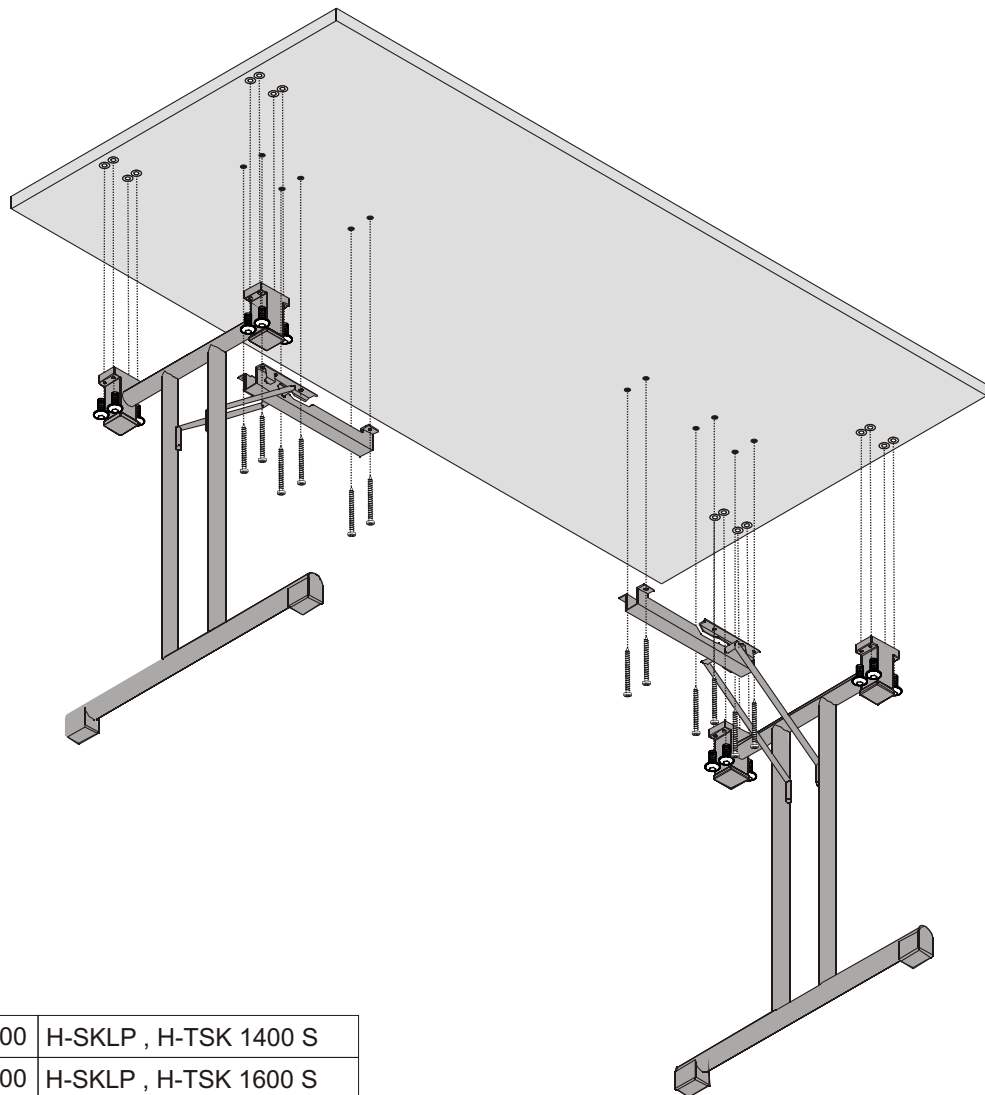

SKL 1400	H-SKLP, H-TSK 1400 S
SKL 1600	H-SKLP, H-TSK 1600 S

H-SKLP	12 ks	
	16 ks	
	1 ks	

